



# Stowaway Straps Installation Guide


## Required Tools

#1 square drive screwdriver (green)

## Installation

Locate desired position and add strips of loop fastener wherever needed so that each Stowaway Lid Strap will be mounted above loop fastener. This ensures that the tips of the mounting screws do not poke through the bottom of the pedalboard.

Drive the provided #6 x 1/2" flat head screws with a #1 screwdriver, being careful not to over-tighten.

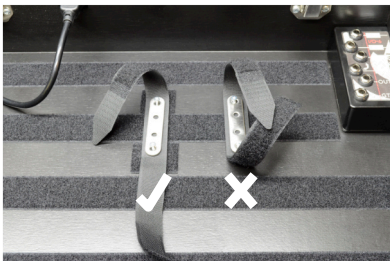

For warranty information and more resources, visit our website at [www.pivotalpedalboards.com](http://www.pivotalpedalboards.com)

Extra copies of this guide can be downloaded at [www.pivotalpedalboards.com/installation-guides](http://www.pivotalpedalboards.com/installation-guides).