



AUX 3 Installation

Required Tools

#1 square drive screwdriver (green)


Step 1

Place the small provided brace plate against the back wall. While pressing the plate against the existing large blank panel, drive the provided #6 x 5/8" flat head screw and trim washer into the predrilled hole, being sure to not over-tighten. Now remove the other screws to release the large blank plate. Swing the front of the blank plate into the board to remove.



Step 2

Tuck the back end of the AUX 3 behind the brace plate and then swing the front end into place. Re-insert the #6 x 5/8" flat head screws and trim washers to secure the AUX 3. Be careful to not over-tighten.

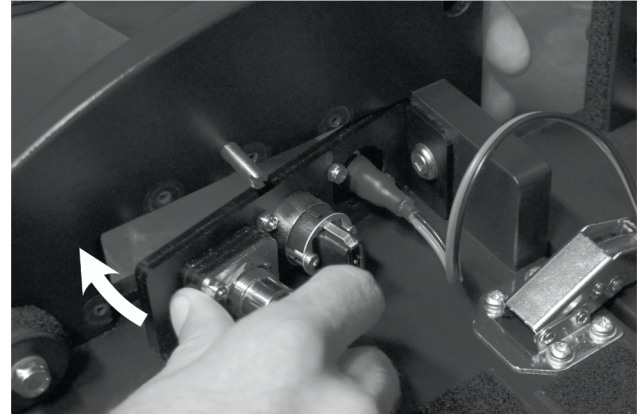

For warranty information and more resources, visit our website at www.pivotalpedalboards.com

Extra copies of this guide can be downloaded at www.pivotalpedalboards.com/installation-guides.