




I/O 6 Patch Bay Installation Guide

Required Tools

- #1 square drive (green) screwdriver
- 5/32" drill bit and drill
- scrap piece of wood (optional)

Step 1

Clear the corner where the I/O 6 is to be installed, including any existing hook/loop. Remove the side wall panel. Remove pedals from the upper deck of the pedalboard.

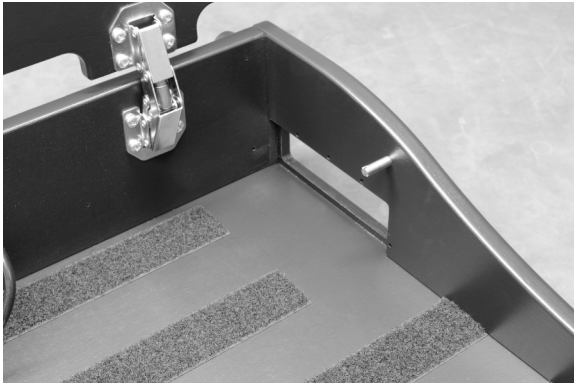


Step 2

Roll the pedalboard onto to its back feet.

Carefully cut out the drilling template and tape it into the appropriate back corner of the bottom of the pedalboard.

Drill the two mounting holes using a 5/32" bit. For best results, hold a scrap piece of wood inside the pedalboard over the mounting hole locations as you drill. This reduces chip out.

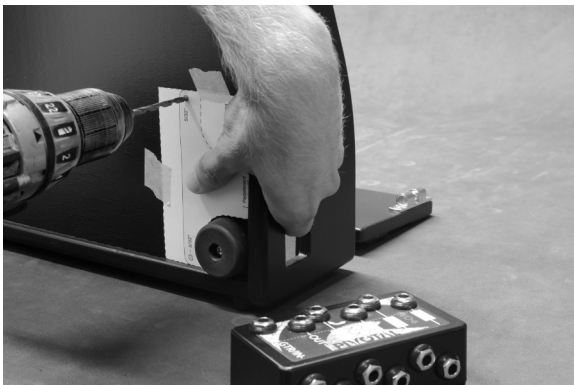

Step 3

Hold the I/O 6 in place as you drive the provided #6/32 x 3/4" machine screws with a #1 square drive (green) screwdriver.



For warranty information and more resources, visit our website at www.pivotalpedalboards.com

Extra copies of this template can be downloaded at www.pivotalpedalboards.com/installation-guides. Be sure that you are printing at 100% size with no scaling.

